


Owner's Guide

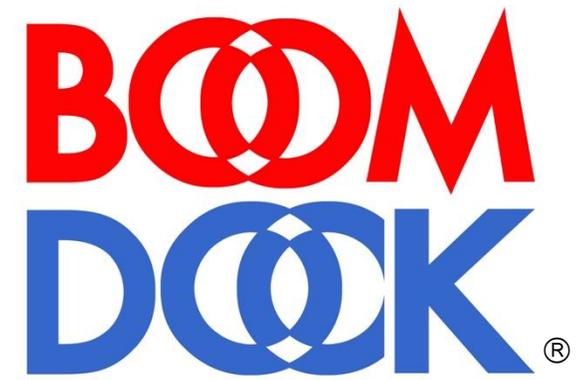

BoomDock LLC

P.O. Box 21148, Albuquerque, NM 87154

BOOM DOCK Owner's Guide



Congratulations on purchasing a Patented BoomDock – the very latest in safe storage and quick access for your Home Defense Long Gun! The BoomDock will quickly and easily configure to dock a wide variety of long guns with many popular accessories, so that in an emergency, you can access your Home Defense firearm quickly while having the assurance that unwanted hands cannot.

Keep in mind that the BoomDock is not a gun safe. **When you are away from home we recommend that your firearms are stored in a safe for maximum protection.** But when home, place your favorite self - defense long gun in your BoomDock for blazing fast access when needed. Look for the new BoomDock that will provide a gun vault for both a pistol and long gun by Shot Show 2018!

Lock Operation

The Lock on your BoomDock can be opened by a personal 4 digit PIN or by using the included RFID User Card. **Prior to any attempt to open the lock, mate the User Card with your lock.** To do so:

1. Press “Zephyr Button” in the middle of the lock
2. Touch the User Card to the lock face. Lock will beep, flash green and open for 10 seconds

Once the User Card is mated, simply repeat steps one and two above for lightning fast access any time.

To program a personal 4 digit PIN:

1. Open the lock as above.
2. While the lock is open enter your 4 digit PIN, press the Zephyr button, enter your PIN again and press the Zephyr button again. *(the lock must be open during this entire process. 1234 cannot be used)*
3. A chime indicates the personal 4 digit PIN was saved
4. To change the PIN follow steps 1-3, entering your new PIN

If possible, attach the BoomDock to a stud with a minimum of 1.5” long screws.

Once your PIN is programmed, simply press Zephyr, enter your PIN and press Zephyr again to open your BoomDock by your personal 4 digit PIN. ***It is important to wait for the bolt to disengage while gently pressing the door closed to prevent any friction to the bolt action.***

The batteries in your lock should last for thousands of cycles, but once power is low, the red and green LEDs will begin to flash and a sound alert will be activated. When this occurs, open the lock and change batteries ASAP. We do encourage you to purchase a battery booster pack in case you don't change them in time to open the BoomDock. **Additional information regarding the lock may be found directly on the Zephyr Lock website.** <http://www.zephyrlock.com/2254-electronic-rfid-lock-with-keypad/>

Mounting


The BoomDock can be mounted vertically, horizontally or flat on walls, doors, floors, bed frames, behind pick-up seats – anywhere there is a flat surface. To mount your BoomDock simply:

1. Place unit against surface intended for mounting with door open making sure it is level.
2. Using a pencil, trace all four mounting holes on mounting surface.
3. Remove unit and drill holes if needed.
4. Using provided screws, (and anchors of applicable) fasten unit to chosen surface.

BoomDock Setup/Weapon Placement

The BoomDock is designed to configure quickly and easily to nearly any long gun configuration – even with installed accessories such as side saddles, optics, tactical lights and more. The Upper Support Track can be moved up and down to 4 possible positions using the PEM studs and nuts provided. The Upper Supports can slide and rotate to provide vertical support against barrels, fore ends, magazines or scopes, while the Trigger Guard Assembly can be moved from left to right and up or down.


The Trigger Guard Pin bears the weight of the Gun by resting inside the forward part of the trigger guard. The Trigger Safety Pin must be adjusted to go behind the trigger, between the back of the trigger and the trigger guard (see below). **Even with this pin in place, please dock your firearm with the safety engaged.**

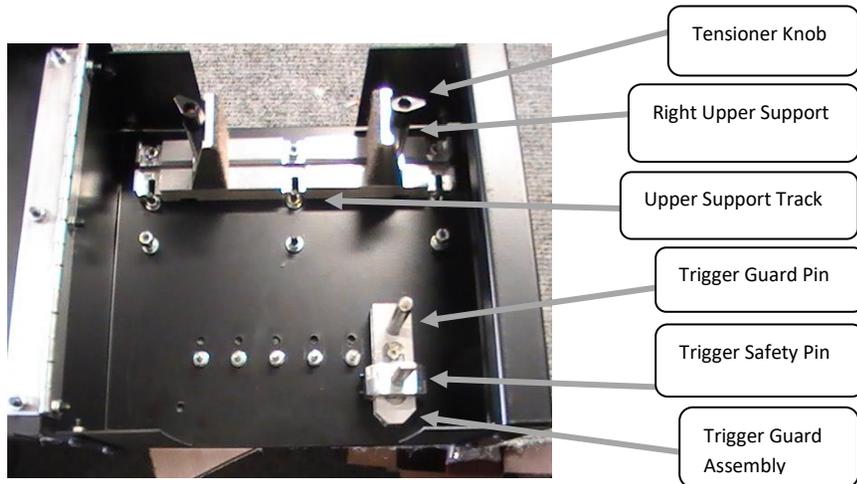

1. Identify best location of Trigger Guard Assembly for your weapon.
2. Using a 3/8" nut driver or deep socket remove the hex nut retaining the Trigger Guard Assembly and move it to the location desired. Replace hex nut.
3. Using a 1/8" Allen Wrench adjust the Trigger Safety Pin so that the Pin lands behind the trigger as the weapon rests on the Trigger Guard Pin.
4. Identify the best location of the Upper Support Track and using a nut driver or socket remove the hex nuts retaining the Track and place it in the new location. Replace hex nuts.
5. Place weapon on the Trigger Guard Pin, center the barrel. While holding the weapon in place with one hand, loosen the Tensioner Knob on one side of the weapon and slide the Upper Support to contact the weapon or scope, then tighten. Repeat for the other Upper Support. Your basic setup is complete.

Accessories

Included in this package are optional upper and lower plastic access restrictors which can be cut with scissors or shears to conform to the weapon profile and added using the studs and nuts provided for the purpose of dust control and/or restricting access. (shown below) However, weapons docked properly remain safe without these installed.

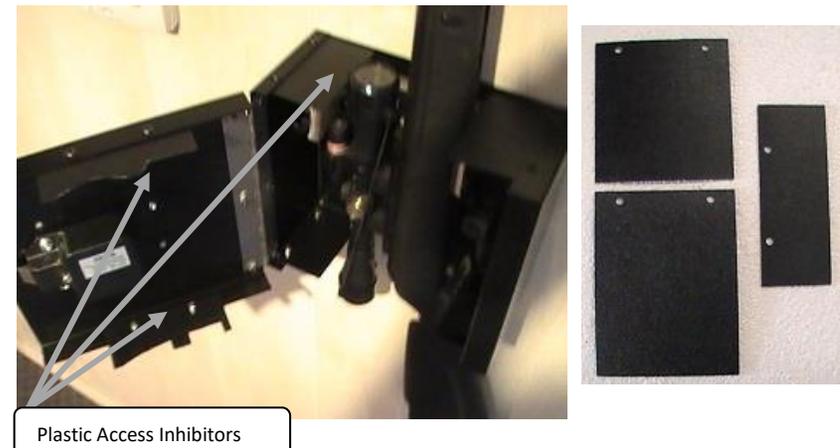

Motion Activated Light

Your BoomDock is equipped with a motion activated light to illuminate your lock keypad for quick access to your firearm in darkness. Remove it from the box, ensure the batteries are installed, turn it to "on" and slide it onto the baseplate mounted on the door of the BoomDock. This is done by aligning the tabs on the light with the slots on the baseplate, then sliding the light to the right until you hear a click. The LEDs in the light should be facing the lock when installed properly.

Magnetic Backed and Peel/Stick Foam

Blocks of foam can be trimmed and placed on BoomDock parts or surfaces to protect from scratching or support your weapon if needed. **Note: Do not place foam in layers sufficient to restrict door closure. If the foam creates excess tension on door, lock solenoid may not release.**

Thank you for purchasing the most versatile personal weapon security device available. For customer tech support, please call: (505) 717-5011 or email us via our website at www.BoomDock.com . For any questions related to billing, please call: (505) 681-4440. [Please like us on Facebook at BoomDock Page.](https://www.facebook.com/pg/BoomDocks/about/?ref=page_internal) (https://www.facebook.com/pg/BoomDocks/about/?ref=page_internal)